


How to set-up your Ergo Kit Wired

Oryx evo D

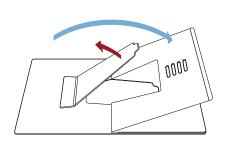

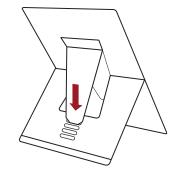


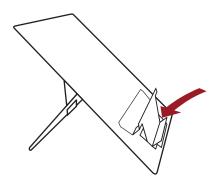


1. Unfold both rear and prop legs.

2. Position the stand upright and select one of the four angle settings.

3. Push here to form laptop / document support

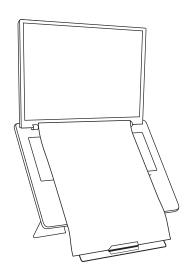

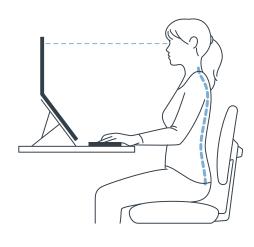


4. Place laptop and document on stand.


5. Position your laptop stand on your desk about an arm's length away with the screen raised. Add and external mouse and keyboard to create and ergonomic workstation.




Hi! Wireless mouse



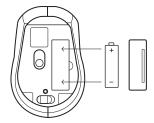

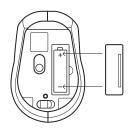

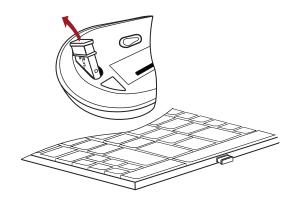



Installing the battery

The optical mouse uses one AA alkaline or rechargeable battery

- 1. Open battery compartment.
- 2. Insert the battery as indicated inside the compartment.
- 3. Replace cover.

Connectig the receiver

- 1. Remove USB nano receiver from the rear of mouse
- 2. Connect USB receiver to USB port on computer
- 3. Plug and Play technology no driver is required
- 4. Mouse features intelligent power saving move or click mouse to reactivate.

Restoring connection

In the event of the mouse losing communication wiith the receiver

- 1. Conect USB nano receiver to USB port on computer.
- 2. To restore mouse remove and replace battery in mouse close to the receiver

Transporting your wireless mouse

- 1. Remove USB nano receiver from your computer to turn off the mouse.
- 2. Store USB nano receiver in base of mouse in transit.

DPI setting

Use DPI button to select fast-medium-slow DPI setting specific to the task.

