



How to set-up your Ergo Kit Wireless


Oryx evo D

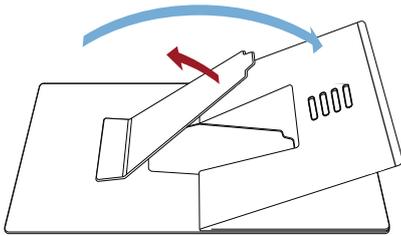


1. Unfold both **rear** and **prop** legs.

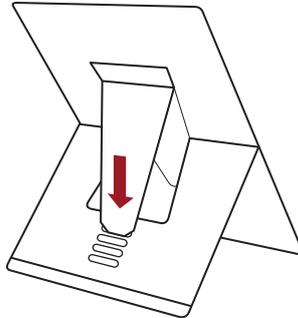


2. Position the stand upright and select one of the four angle settings.

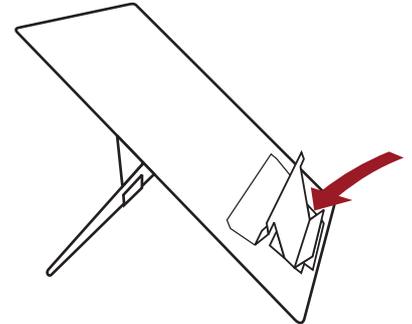

3. Push here to form laptop / document support

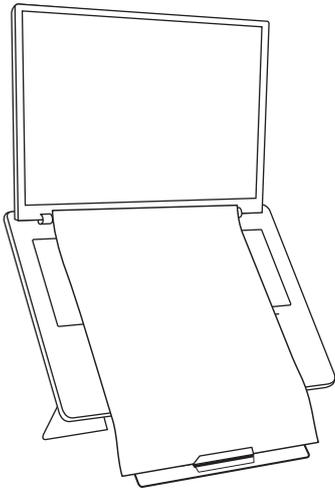


4. Place laptop and document on stand.

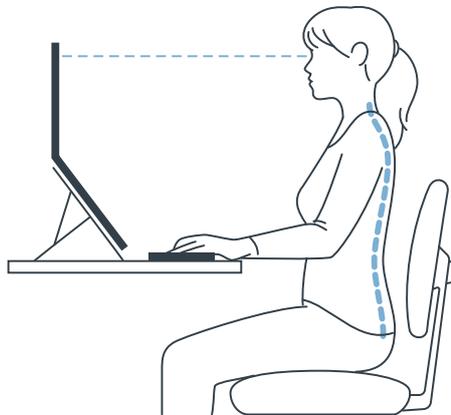

5. Position your laptop stand on your desk about an arm's length away with the screen raised. Add an external mouse and keyboard to create an ergonomic workstation.

Solo-X wireless keyboard

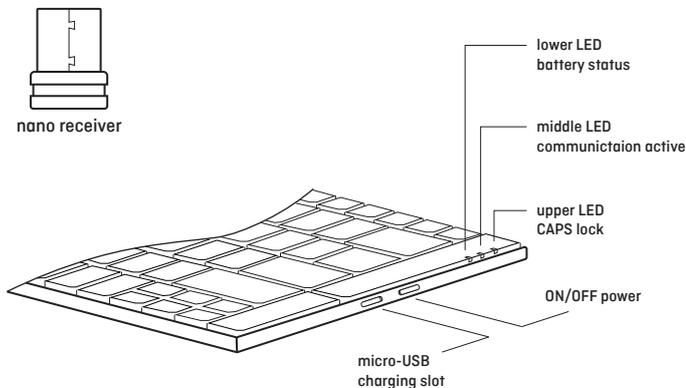

Multimedia Hotkeys function

- FN + ESC = media player
- FN + F1 = play/pause
- FN + F2 = previous track
- FN + F3 = next track
- FN + F4 = volume up
- FN + F5 = volume down
- FN + F6 = mute(windows)
- FN + F7 = web home
- FN + F8 = search
- FN + F9 = favorite
- FN + F10 = email
- FN + F11 = screen lock
- FN + F12 = my computer

System Requirements

PC with Windows XP, Windows Vista, Win 7, Win 8, Win 10

How to recharge

On the right side of the keyboard there is a micro-USB slot. To recharge from the PC, directly use the cable provided or alternatively use a standard phone charger with no power charging function.

How to set up the keyboard

1. On the right side of the keyboard, switch the ON/OFF button to turn ON.
2. Insert the USB dongle provided into one of the PC's USB ports. The keyboard features plug-n-play software, so there is no additional action required.
3. If keyboard does not function correctly, then reset as described on the right.

How to recharge

On the right side of the keyboard there is a micro-USB slot. To recharge from the PC, directly use the cable provided or alternatively use a standard phone charger with no power charging function.

LED light functions

There are 3 LEDs on the right upper corner of the keyboard:

1. Lower: Battery status
 - RED - battery is low/charging via USB
 - GREEN - fully charged
2. Middle: Blue when USB dongle gets connected to the computer and communication between keyboard and computer is active.
3. Upper: Blue when CAPS lock is active.

How to reset






In case the keyboard encounters error in communication with the computer, follow the steps below to reset to factory settings:

1. Check if the battery level is too low. If lower LED is RED, then recharge is required.
2. Press "ESC" and "K" keys at the same time, and after 2 seconds insert the USB dongle in the PC's USB port, keeping the key pressed.

Riser strip

A magnetic riser strip is included with the keyboard and if required it will self locate to the embedded magnets at the top of the keyboard base.

Hi! Wireless mouse

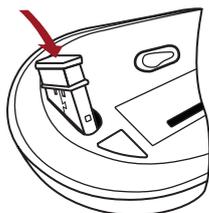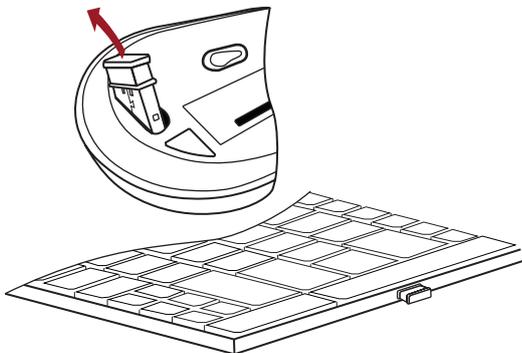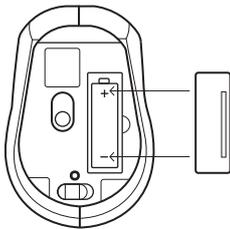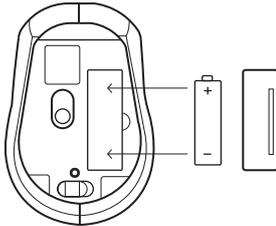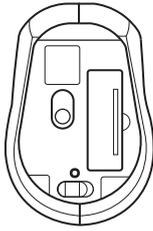

Installing the battery

The optical mouse uses one AA alkaline or rechargeable battery

1. Open battery compartment.
2. Insert the battery as indicated inside the compartment.
3. Replace cover.

Connectig the receiver

1. Remove USB nano receiver from the rear of mouse
2. Connect USB receiver to USB port on computer
3. Plug and Play technology - no driver is required
4. Mouse features intelligent power saving - move or click mouse to reactivate.

Restoring connection

In the event of the mouse losing communication wiith the receiver

1. Conect USB nano receiver to USB port on computer.
2. To restore mouse remove and replace battery in mouse close to the receiver

Transporting your wireless mouse

1. Remove USB nano receiver from your computer to turn off the mouse.
2. Store USB nano receiver in base of mouse in transit.

DPI setting

Use DPI button to select fast-medium-slow DPI setting specific to the task.